


T10.05 Link positions for RM-6

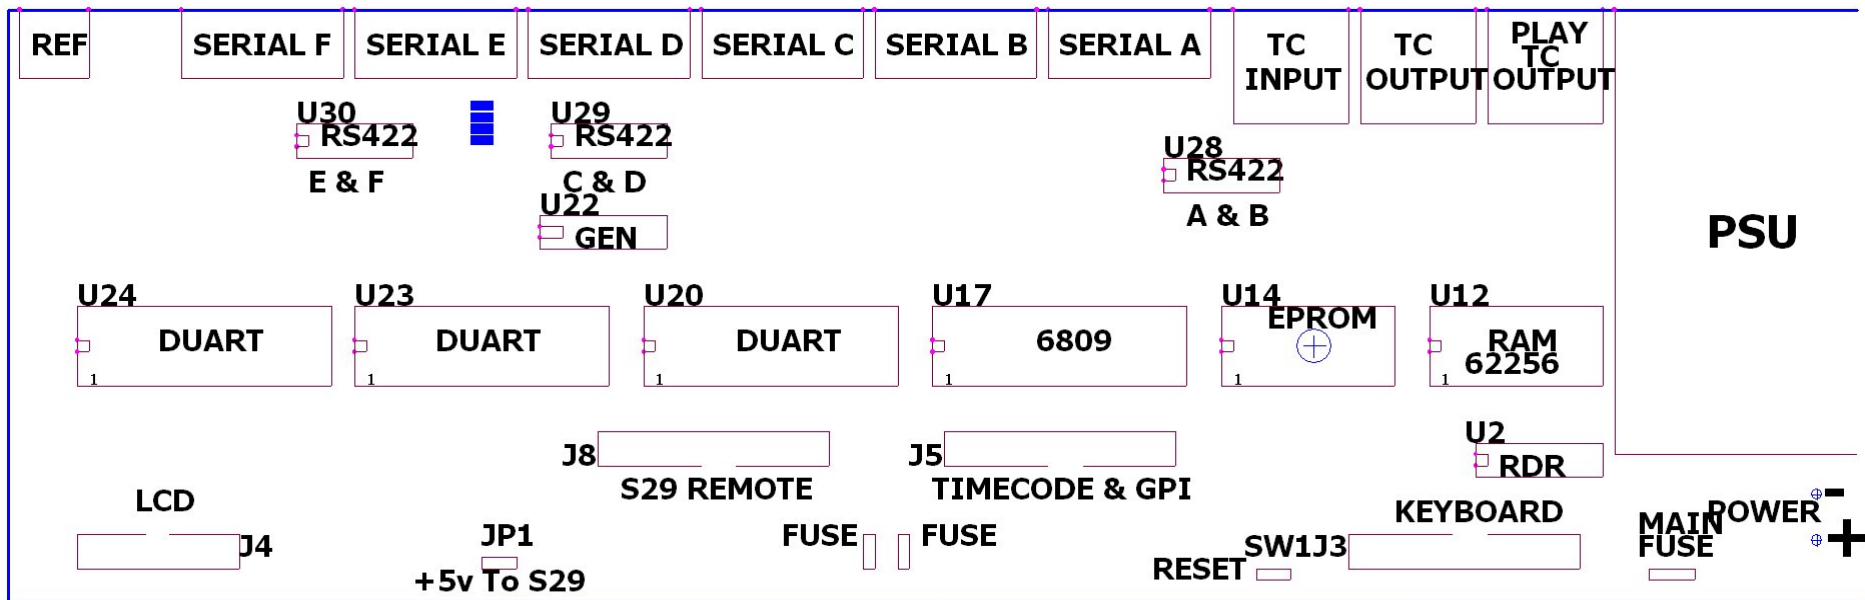

LINKS POSITION FOR SERIAL E AS OUTPUT

LINKS POSITION FOR SERIAL E AS INPUT



T10.06 How To Open RM-6

To Open the RM-6 for access, Remove the Top screw front and back on one side, Loosen the bottom screws on the same side, rotate the side outwards by approx 20 degrees. Remove the screw in the center of the Lid and lift off the top panel.

Note: when replacing the screws rotate anti-clockwise until a click is felt, then clockwise. In this way the screw uses the same thread.

T5.03 RS422 (Sony 9 pin) CABLE

Use on SR-4/SR-24 Ports A, B, C, D as outputs
SR-24 ports E & F as inputs

Function SR-4 (Controller)	9 pin 'D' Male on cable (Both Ends)	Cable Colour	Function (Controlled Device)
	1		
Rx-	2	Red	Tx-
Tx+	3	Yellow	Rx+
Ground	4	Screen	Ground
	5		
	6		
Rx+	7	Blue	Tx+
Tx-	8	White	Rx-
	9		

T5.04 Tx-Rx Invert Sony 9 pin CABLE

Use On SR-24 port E when connected as an output to a machine,

Function SR-24 port E	9 pin 'D' Male on Cable	9 pin 'D' Male on cable	Cable Colour
	1	1	
Tx-	2	8	Red
Rx+	3	7	Yellow
Ground	4	4	Screen
	5	5	
	6	6	
Tx+	7	3	Blue
Rx-	8	2	White
	9	9	