


Using Encoded GPI outputs on the SR/MR parallel Port

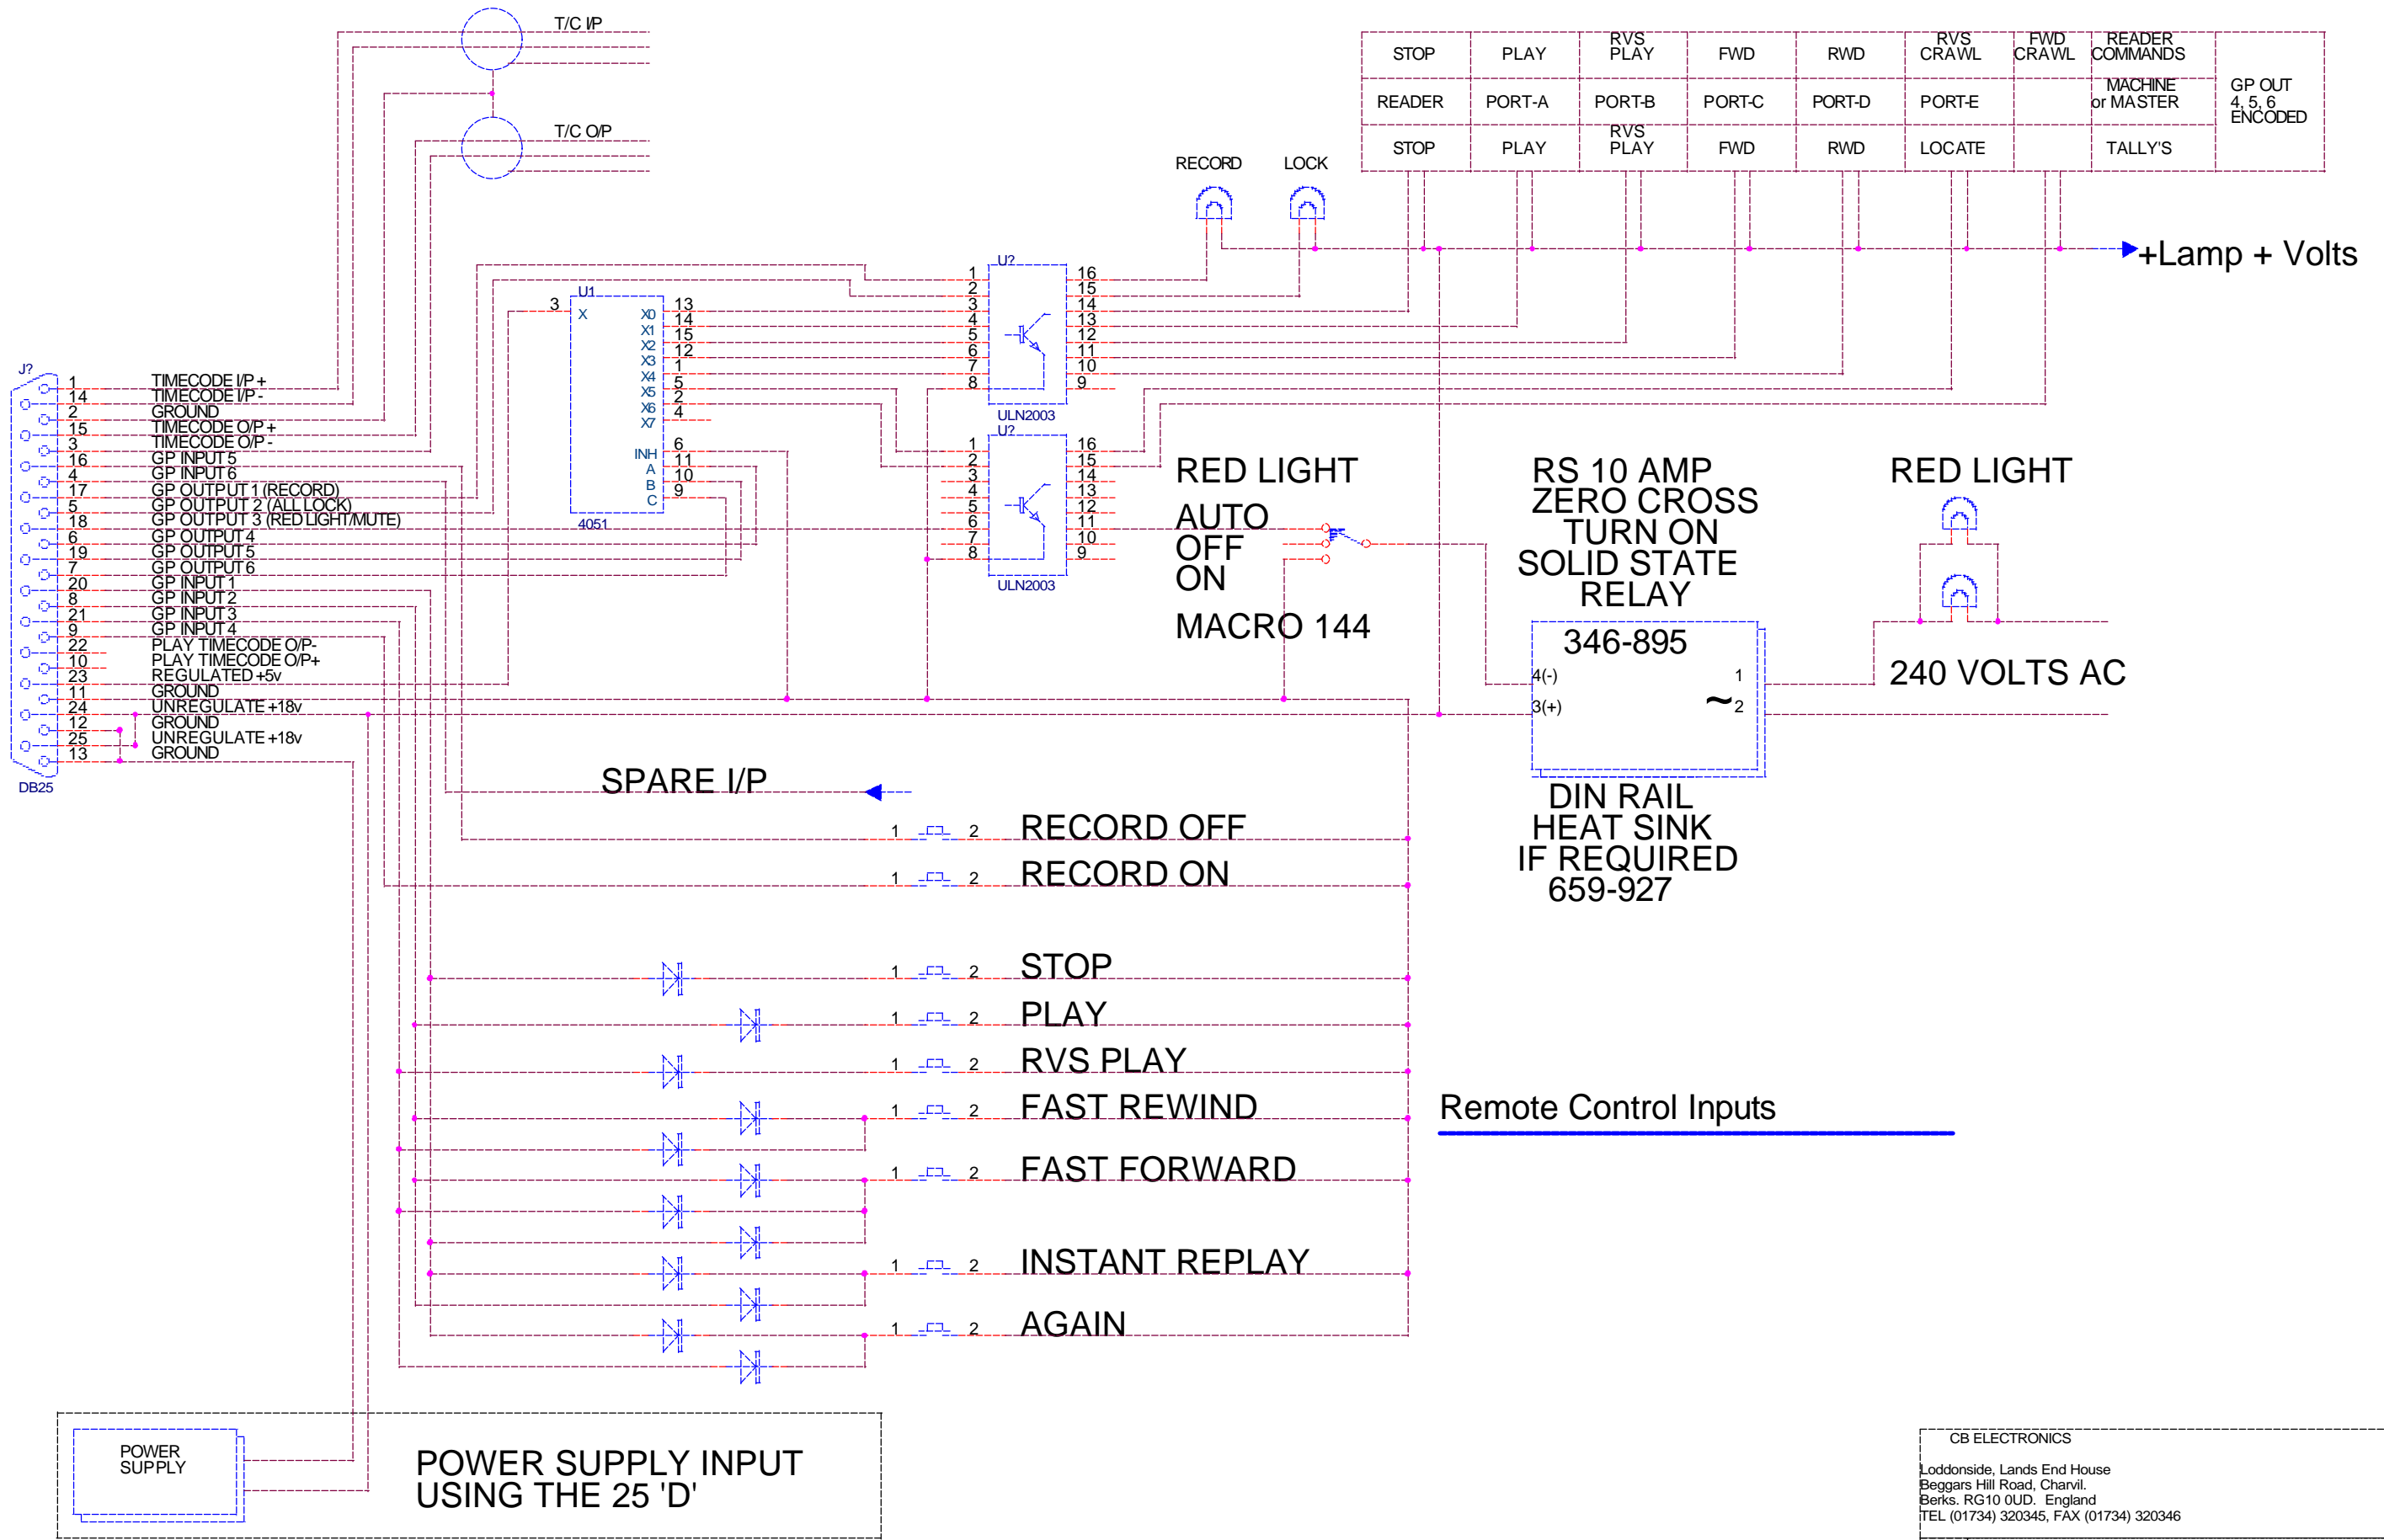

STOP	PLAY	RVS PLAY	FWD	RWD	RVS CRAWL	FWD CRAWL	READER COMMANDS	GP OUT 4, 5, 6 ENCODED
READER	PORT-A	PORT-B	PORT-C	PORT-D	PORT-E		MACHINE or MASTER	
STOP	PLAY	RVS PLAY	FWD	RWD	LOCATE		TALLY'S	